

PFAFF

5489-H

Unterklassen-Ausstattung

Subclass parts

Composition des sous-classes

Composición de las subclases

Unterklassen-Ausstattung

Subclass organization

Equipement des sous-classes

Dotación de las subclases

| Unterklasse Subclass Sous-classe Subclase | Ausführung Model Version Tipo de máquina | Nadelabstand in mm Needle gauge in mm Écartement des aiguilles en mm Distancia entre agujas en mm | Nadelstange Needle bar Barra de aguja | Stoffschieber links Feed dog, left Griffe gauche Elemento izquierdo del transportador inferior | Stoffschieber rechts Feed dog, right Griffe droite Elemento derecho del transportador inferior | Stichplatte Needle plate Plaque à aiguille Placa de aguja |
|--|---|--|---|--|--|--|
|--|---|--|---|--|--|--|

-814/01-704/02-739/01-748/26 2-Nadel-Ausführung · 2-needle version

| | | | | | | |
|--------------------|----------------|----------|-------------------------------|-------------------------------|---------------|-------------------------------|
| -58/05-960/11; /14 | BN 46 CN 46 | 6,4; 7,2 | 91-178 073-93 ^{10/2} | 91-059 726-04 ^{10/2} | 91-059 199-04 | 91-158 295-93 ^{10/2} |
|--------------------|----------------|----------|-------------------------------|-------------------------------|---------------|-------------------------------|

-814/01-704/02-739/01-748/26 3-Nadel-Ausführung · 3-needle version

| | | | | | | |
|--------------------|----------------|------------------|-------------------------------|-------------------------------|---------------|-------------------------------|
| -58/05-960/11; /14 | BN 46 CN 46 | 3,2x3,2; 3,6x3,6 | 91-178 074-93 ^{10/2} | 91-059 699-04 ^{10/2} | 91-059 199-04 | 91-158 119-93 ^{10/2} |
|--------------------|----------------|------------------|-------------------------------|-------------------------------|---------------|-------------------------------|

 
⁴ = Ausführung angeben
= Indicate model
= Préciser la version
= Indiquez el tipo de máquina

⁵ = Nähmuster einsenden
= Submit sewing sample
= Joindre échantillons de couture
= Envíese muestra de costura

¹⁰ = Nadelabstand
= Needle gauge
= Écartement des aiguilles
= Distancia entre agujas




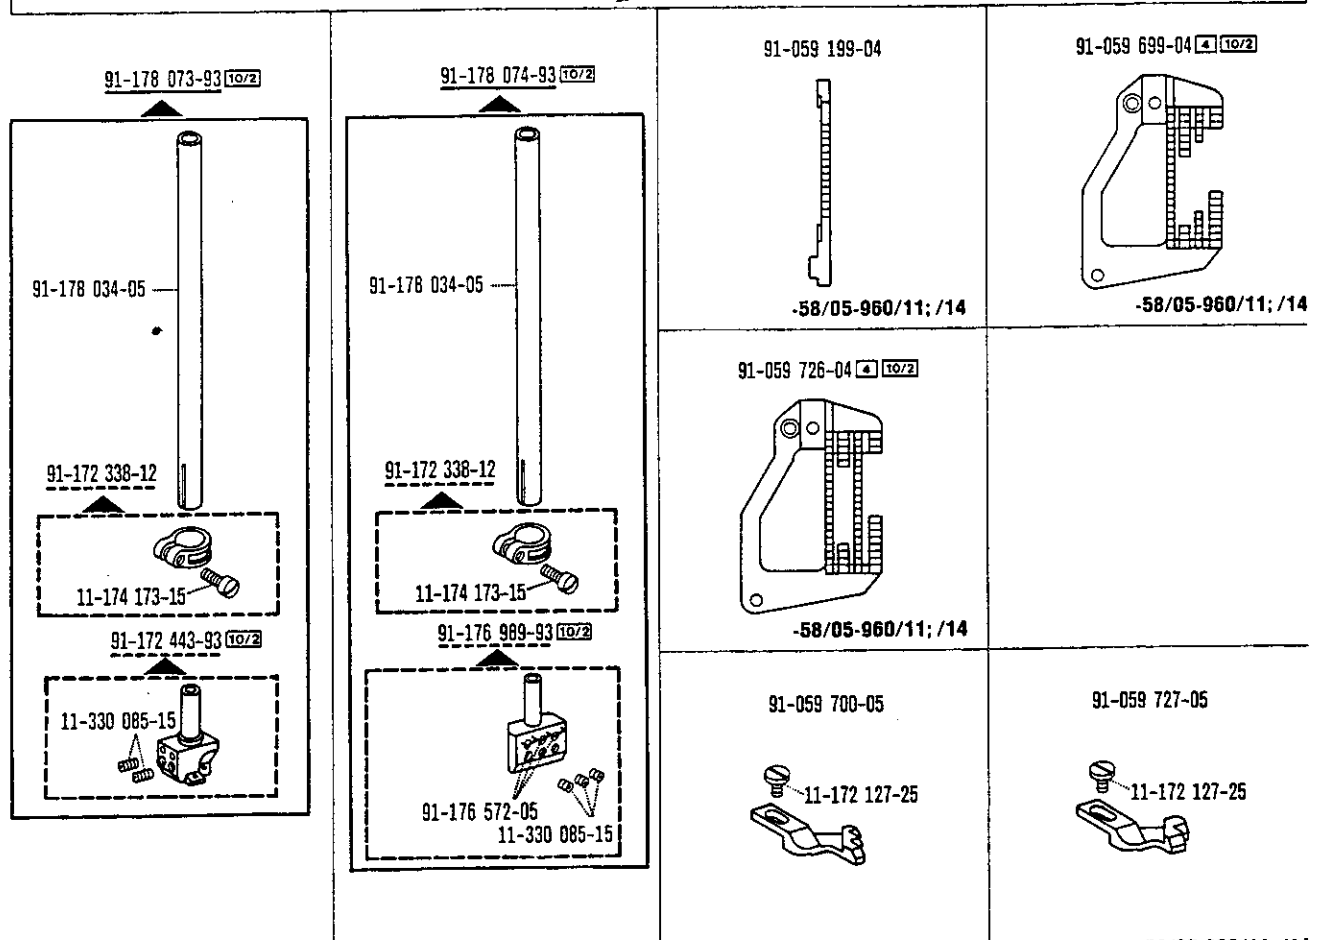




^{10/2} = Nadelabstand bei Bestellung angeben
= State needle gauge on order
= Indiquer écartement des aiguilles à la commande
= Indiquez en los pedidos la distancia entre agujas





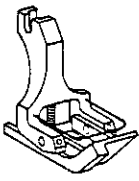
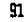

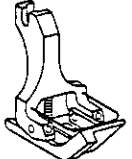
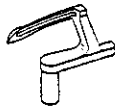




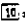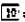

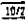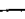Unterklassen-Übersicht/ Table of subclasses/ Table des sous-classes/ Tabla de subclases

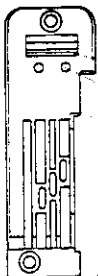

 
**Equipement des sous-classes
Unterklassen-Ausstattung**

**Dotación de las subclases
Subclass organization**

 
| Unterklasse Subclass Sous-classe Subclase | Ausführung Model Modèle Tipo de máquina | Maschine Presser/foot Pied presseur Pie prensateelas | Apparat Attachment Appareil Aparato | Kettenschnitzgreifer, vorn Looper, front Boucleur avant Garfio delantero para punto cademeta | Kettenschnitzgreifer, mitte Looper, middle Boucleur centrale Garfio central para punto cademeta | Kettenschnitzgreifer, hinten Looper, rear Boucleur arrière Garfio posterior para punto cademeta | Medenschutz Needle guard Garde-aiguille Guardaaguja | Abdeckplatte Cover plate Plaque de recouvrement Placa cubierta |
|--|--|---|--|--|---|--|--|---|
| -814/01-704/02-739/01-748/26 | | Machine à 2 aiguilles · Máquina de 2 agujas | | | | | | |
| -58/05-960/11;/14 | BN 46 CN 46 | 91-157 499-93   | 91-056 977-93 | 91-169 867-05  = 6,4 mm 91-169 868-05  = 7,2 mm | | 91-169 877-05  = 6,4 mm 91-169 878-05  = 7,2 mm | 91-059 727-05 | 91-178 051-91 |
| -814/01-704/02-739/01-748/26 | | Machine à 3 aiguilles · Máquina de 3 agujas | | | | | | |
| -58/05-960/11;/14 | BN 46 CN 46 | 91-157 143-93   | 91-056 977-93 | 91-176 980-05 | 91-176 981-05 | 91-176 982-05 | 91-059 700-05 | 91-178 051-91 |

| | | | |
|--|--|---|---|
| <p>91-158 119-93</p>  <p>91-158 122-01 11-210 076-15 (2 x) 91-158 120-04</p> <p>-58/05-960/11;/14</p> | <p>91-158 295-93</p>  <p>91-158 122-01 11-210 076-15 (2 x) 91-158 295-04</p> <p>-58/05-960/11;/14</p> | <p>91-157 143-93  </p>  <p>-58/05-960/11;/14</p> | <p>91-157 499-93  </p>  <p>-58/05-960/11;/14</p> |
| <p>91-169 867-05</p>  <p>-58/05-960/11;/14</p> | <p>91-169 868-05</p>  <p>-58/05-960/11;/14</p> | <p>91-169 877-05</p>  <p>-58/05-960/11;/14</p> | <p>91-169 878-05</p>  <p>-58/05-960/11;/14</p> |
| <p>91-176 980-05</p>  <p>-58/05-960/11;/14</p> | <p>91-176 981-05</p>  <p>-58/05-960/11;/14</p> | <p>91-176 982-05</p>  <p>-58/05-960/11;/14</p> | |

Unterklassen-Ubersicht/ Table of subclasses/ Table des sous-classes/ Tabla de subclases

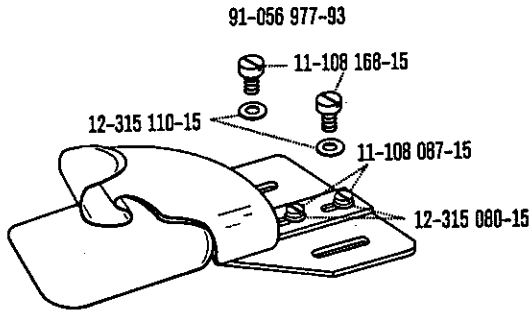

-58/05-960/11;/14

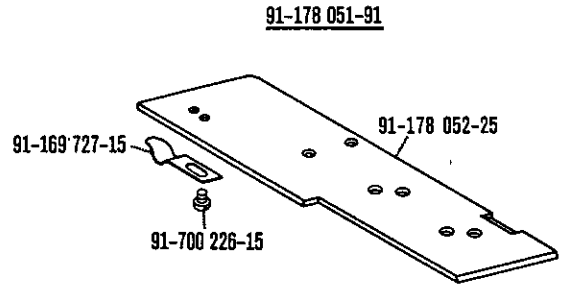

-58/05-960/11;/14