

SC-510 取扱説明書 正誤表

Errata of Instruction Manual for SC-510

Errata del Manual de Instrucciones para SC-510

SC-510 使用説明書正誤表

No.00

40020449

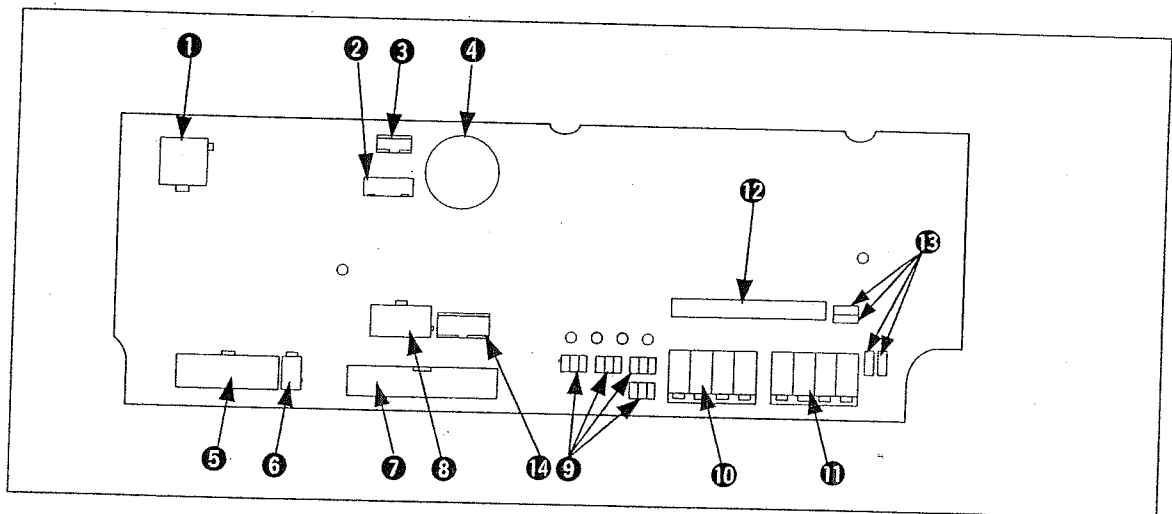
6. コードの接続方法 / Connecting the cords / Para conectar los cables / 電纜的連接方法

コネクタ配置図の項目 13 の内容を変更し、14 が追加されます。

Contents of item 13 in the connector layout diagram are changed, and 14 is added.

En el diagrama de distribución de conectores, se ha modificado el contenido del ítem 13, y se ha adicionado el ítem 14.

由於變更了連接器配置圖的項目 13 的內容，14 被追加。



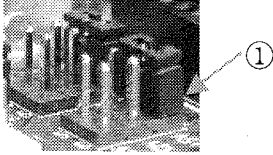
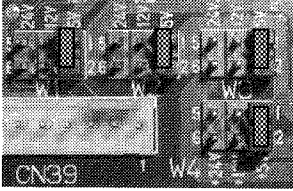
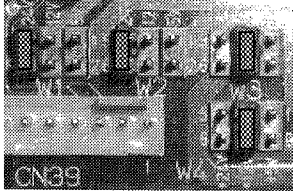
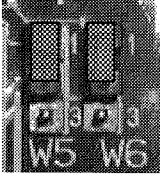
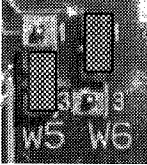
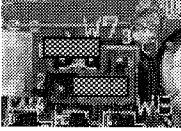
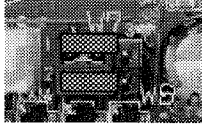
- 13 W5 ~ W8 オプション入力切替え用ジャンパー
(詳細はサービスマニュアルを参照願います。)
- 14 CN39 立ちミシンペダルコネクタ (PK-70等使用可能)
- 13 W5 to W8 Jumpers for optional input changeover
(For the details, refer to Engineer's Manual.)
- 14 CN39 Pedal for standing work connector (PK-70 and the like can be used.)
- 13 W5 a W8 Conectores a puente para cambiador de entrada opcional
(Para más detalles, consulte el Manual del Ingeniero.)
- 14 CN39 Pedal para conector de trabajo en pie (pueden utilizarse PK-70 y similares)
- 13 W5 ~ W8 選項輸入變換用跨接線插座(詳細內容請參照服務手冊。)
- 14 CN39 立式縫紉機踏板連接器(PK-70等可以使用)

JUKI CORPORATION

INTERNATIONAL SALES H.Q.
8-2-1, KOKURYO-CHO,
CHOFU-SHI, TOKYO 182-8655, JAPAN
PHONE : (81)3-3430-4001 to 4005
FAX : (81)3-3430-4909 · 4914 · 4984
TELEX : J22967

Copyright © 2004 JUKI CORPORATION
 • 本書の内容を無断で転載、複写することを禁止します。
 • All rights reserved throughout the world.
 • Reservados todos derechos en el mundo entero.
 • 版權所有，嚴禁擅自轉載、翻印本書的內容。

INSTRUCTION MANUAL (SUPPLEMENT) FOR SC-510 Corrigenda

Page	Wrong	Right
page 1 2) and page 2 3)	Refer to the Instruction Manual.....	In case of Instruction Manual for the sewing machine is the "-6" type, refer to the Instruction Manual
page 4	<p>1.SETTING SC-510 (1)Setting jumpers(W1 to W6)</p>	<p>1.SETTING SC-510 SC-510 is required a setting of a jumper and a setting of the mounted machine head. For a setting jumper, change the position of the jumper as "(1) Setting jumpers." Be careful of the handling of a jumper. It may damage, if too much power is applied to a jumper.</p>  <p>A setting the mounted machine head chooses mounted machine head by function No.95 (mounted machine head) of SC-510. (1) Setting jumpers(W1 to W8)</p>    <p>LU-2200N-7 series</p>    <p>Set W7 and W8 to "1-2."</p>
page 8	At this time,remove the connector for the sewing machine for safety's sake.	<p>At this time,remove the connector for the sewing machine for safety's sake. When you remove a connector, please be sure to turn OFF the power. When you adjust the UP position detecting plate ⑤, and when you turn the joint of synchronizer, please be sure to turn OFF the power.</p>
page 12 1) and page 13 1)	Install panel thread guide ⑨	Install panel thread guide ①
page 13	<p>[LU-2200 series] 1) 2)</p>	<p>[LU-2200 series] Please perform Procedures 1) to 4) except LU-22*6N series (long arm). LU-22*6N series (long arm) should perform only Procedure 5). 1)</p>